








# INSTALLATION HANDBOOK

## STEEL MOUNTED ANCHORS

SafetyLink is an innovative anchor company achieving success and keeping you safe whilst working at heights.

-  ROOF ANCHORS
-  HORIZONTAL LIFELINES
-  PERMANENT LADDERS
-  LADDER STABILISERS
-  TEMPORARY ANCHOR
-  WALKWAY & GUARDRAIL
-  X-RAIL - HORIZONTAL RAIL



Read entire handbook before installing SafetyLink products. All products must be installed in accordance with SafetyLink's installation handbook, using only products supplied by SafetyLink Pty Ltd. Failure to follow all warnings and instructions may result in serious injury or death.



Asia-Pacific/The Americas  
info@safetylink.com  
Europe/Africa/Middle East  
europe.sales@safetylink.com  
Northern Europe  
uk.sales@safetylink.com

[www.safetylink.com](http://www.safetylink.com)

## INSTALLATION OF SAFETYLINK STEEL MOUNTED ANCHORS

<b>WARNINGS .....</b>	<b>3</b>
<b>MAINTENANCE – PERIODIC INSPECTIONS.....</b>	<b>4</b>
FIXED LADDERLINK: LADDER SUPPORT BRACKET .....	4
SAFETYLINK ANCHORAGES .....	4
<b>WARRANTIES .....</b>	<b>5</b>
<b>EYEBOLT/EYENUT/EYEHOOK ANCHOR .....</b>	<b>6</b>
INSPECT THE INTEGRITY OF THE STRUCTURE .....	6
POSITIONING OF ANCHOR POINTS .....	6
DRILLING THE HOLE .....	6
FITTING EYEBOLTS .....	6
FITTING EYENUTS.....	6
FITTING EYEHOOKS.....	6
<b>SPACERLINK ANCHOR .....</b>	<b>7</b>
INSPECT THE INTEGRITY OF THE STRUCTURE .....	7
POSITIONING OF SPACERLINK ANCHOR POINT .....	7
DRILLING THE HOLE .....	7
INSTALLATION – WELDED EYENUT .....	7
INSTALLATION – THREADED EYENUT.....	7
<b>SWIVELINK ANCHOR.....</b>	<b>8</b>
INSPECT THE INTEGRITY OF THE STRUCTURE .....	8
STEEL MOUNTED SWIVELINK.....	8
<b>APPENDIX – DIAGRAM 2 – ANCHOR POSITIONING LAYOUT.....</b>	<b>9</b>
<b>EXPERT FALL PROTECTION PLANNING .....</b>	<b>10</b>
<b>NOTES .....</b>	<b>11</b>
<b>IN CASE OF ACCIDENT.....</b>	<b>12</b>



Safety Centre  
Training



Installation  
Video



Anchor Layout  
Video



Catalogue



Website



# WARNINGS



## READ CAREFULLY SOMEONE'S LIFE DEPENDS ON IT

### INSTALLATION MUST BE CARRIED OUT BY, OR UNDER THE SUPERVISION OF A COMPETENT PERSON.

The building or structure for the anchorages should be assessed by an engineer, unless it is clear to a competent height safety installer that the anchorages system is structurally adequate.

**STANDARD EYEBOLTS MUST ONLY BE USED AS A FALL ARREST ANCHOR.**

**ABSEILING EYEBOLTS ARE TO BE USED FOR ROPE ACCESS (ABSEILING).**

**SURFACE MOUNTED ANCHORS MUST NOT BE USED FOR ROPE ACCESS (ABSEILING).**

**RETRO EYEBOLTS USED FOR ROPE ACCESS (ABSEILING) EXCEPT ON HIGH PROFILE SECTION.**

When installing anchor points all safety procedures must comply in accordance with the current safety code/s of practice/s for working at heights.

- Recommended waterproofing for roof tiles: *Sika Flex Co-Polymer Sealant*.
- Recommended waterproofing for metal roof: *Silicone Sealant*.
- All threads must be coated with Loctite prior to assembly (**IMPORTANT NOTE: Before applying Loctite 243 use Loctite 7471 primer to activate the surface according to manufacturer's instructions**).
- A personal energy absorber or a fall-arrest device with a personal energy absorber must be used to connect to all SafetyLink Anchorages and (or) Stops.


### **MAXIMUM USER PER EYEBOLT IS ONE (1)**

#### **WARNING**

Locking Hex Nut must be fully screwed up the thread of the eyebolt to expose 30mm of thread.

This thread must be fully screwed into the bracket, coat threads with Loctite (**IMPORTANT NOTE: Before applying Loctite 243 use Loctite 7471 primer to activate the surface according to manufacturer's instructions**).

Locking Hex Nut must be firmly tightened onto the bracket to stop the eyebolt from unscrewing and to gain maximum strength.

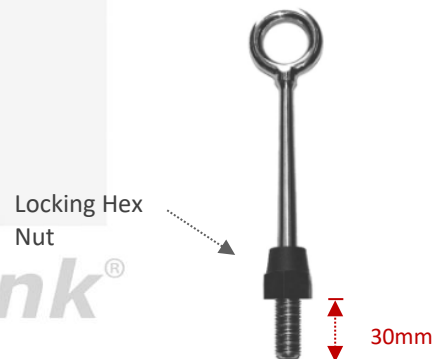


**EYEBOLTS** - Threads need to have a minimum of **SIX FULL 360° TURNS** into the ultimate thread.

**RETRO EYEBOLTS** - Threads need to have a minimum of **EIGHT FULL 360° TURNS** into the ultimate thread.



#### **CORRECT**

Always use a spanner when tightening and un-tightening the locking hex nut.

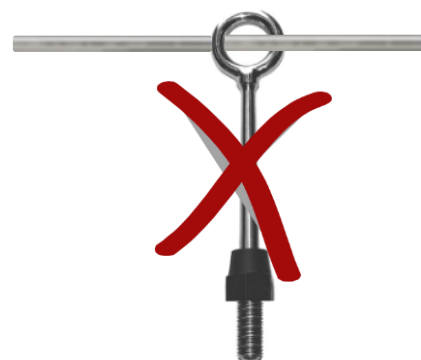

#### **WRONG**

DO NOT place an object into the eye of the eyebolt to tighten or un-tighten the locking hex nut, as this may damage the eyebolt.

# MAINTENANCE – PERIODIC INSPECTIONS

All items of height safety equipment which are in regular use shall be subjected to periodic inspection and servicing. These regular scheduled inspections and servicing must be carried out by a competent height safety installer.

## FIXED LADDERLINK: LADDER SUPPORT BRACKET

**ALL LADDERLINKS MUST BE INSPECTED EVERY 12 MONTHS, INSPECTIONS NEED TO BE CARRIED OUT BY A COMPETENT HEIGHT SAFETY INSTALLER.**

Procedures to be followed at inspection time:

- Visually inspect ladder support brackets for any signs of deterioration or the protective coating being removed. *(Note: LadderLink is made from marine grade aluminium and therefore should not corrode).*
- Ensure LadderLink is firmly secured to the structure as per SafetyLink Installation Handbook. *(refer to Installing LadderLink).*

## SAFETYLINK ANCHORAGES

**ALL ANCHORAGES MUST BE INSPECTED EVERY TWELVE MONTHS, INSPECTIONS NEED TO BE CARRIED OUT BY A COMPETENT HEIGHT SAFETY INSTALLER.**

Procedures to be followed at inspection time:

- Visually inspect anchors for signs of deterioration.
- The FrogLink/TileLink anchor point has two energy absorbing regions and two stabilising joins which hold the eyelet in place during use. If these energy absorbing regions are expanded this will indicate the anchor point has arrested a fall. Similarly, if the two stabilising joins have been broken this would also indicate the FrogLink/TileLink has arrested a fall and should be replaced.
- The eyebolt should remain straight, a bent eyebolt will indicate that the anchor point has arrested a fall *(The design features of the eyebolt includes the ability to bend like a fishing pole starting from the top and working its way to the bottom, enabling it to use up energy as the eyebolt bends whilst lessening the force on the person falling and the attachment point).*
- Visually inspect the components of the anchor for corrosion, superficial surface marking is permitted while deeper corrosion or pitting would require attention.
- Manually (by hand) check the eyebolt for rigidity and tightness, if the eyebolt can turn in the anticlockwise direction it will require attention.
- Visually inspect the rubber hat washer and waterproofing components to ensure it has remained sealed.
- Visually inspect the attachment component of the anchorage where practically possible.
- Visually inspect the parent structure for modifications or deterioration which might lead to loss of anchorage strength.
- For Concrete Installation Only: To comply with Australian Standards, each ConcreteLink must be tested after installation and at every recertification inspection. Ensure you wait the recommended curing time as specified by the chemical anchor instructions. The pull test can be done using a 16mm threaded eyebolt. Test consists of ultimate pull out force proof loading to 50% of design purpose of anchorage.
- A personal energy absorber or a fall-arrest device with a personal energy absorber must be used in conjunction with all SafetyLink Anchorages and Lifeline systems.

**IN ADDITION TO SAFETYLINK PTY LTD EQUIPMENT, ALL ANCILLARY EQUIPMENT MUST BE INSPECTED IN ACCORDANCE WITH APPLICABLE REGULATORY REQUIREMENTS AND THE MANUFACTURER'S INSTRUCTIONS.**



**FOR MAINTENANCE ADVICE AND SERVICES PLEASE CONTACT SAFETYLINK  
ON +61 249 641068 OR 1300 789545 FOR YOUR NEAREST SAFETYLINK INSPECTION SERVICE  
CENTRE OR EMAIL: [info@safetylink.com](mailto:info@safetylink.com)**



# WARRANTIES

## EXTRACT: SafetyLink Pty Ltd STANDARD TERMS AND CONDITIONS

- 11.1 To the extent permitted by law all implied conditions, warranties and undertakings are expressly excluded.
- 11.2 Except as provided in this clause the Company shall not be liable for any loss or damage, whether direct or indirect (including consequential losses or damage) arising out of any breach of contract by the Company or any negligence of the Company, its employees or agents.
- 11.3 Should the Company be liable for a breach of a guarantee, condition or warranty implied by the Australian Consumer Law (not being a guarantee, condition or warranty implied by sections 51, 52 and 53 of that Law) then its liability for a breach of any such condition or warranty express or implied shall be limited, at its option, to any one or more of the following.
- A) in case of Goods
    - (I) the replacement of the Goods or the supply of equivalent Goods.
    - (II) the repair of the goods,
    - (III) the payment of the cost of replacing the Goods or acquiring equivalent Goods.
    - (IV) The payment of the cost of having the Goods repaired.Provided that any such Goods are returned to the Company by the Purchaser at the Purchaser's expense.
  - B) in the case of services
    - (i) the supply of the services again,
    - (ii) the payment of the cost of having the services supplied again.
- 11.4 The Company will not be liable for the costs of recovery of the Goods from the field, loss of use of the Goods, loss of time, inconvenience, incidental or consequential loss or damage, nor for any other loss or damage other than as stated above, whether ordinary or exemplary, caused either directly or indirectly by use of the Goods.
- 11.5 The Company warrants that at the time of shipment, Products manufactured by it will be free from defects in material and workmanship. In the absence of a modified written warranty, the Company agrees to making good any such defects by repairing the same or at the Company's option by replacement, for a period of (1) one year from the date of shipment. This limited warranty applies provided that:
- (a) defects have arisen solely from faulty materials or workmanship;
  - (b) the Products have not received maltreatment, inattention or interference;
  - (c) **the Products have been installed in accordance with the Company's Installation Handbooks using only products supplied by the Company;**
  - (d) accessories used with the Products are manufactured by or approved by the Company;
  - (e) the Products are maintained in accordance with Australian Standard 1891.4 (section 9).
  - (f) you notify any claim under this warranty to SafetyLink in writing to the address below no later than 14 days after the event or occurrence concerning the product giving rise to the claim and you pay all costs related to your claim.

This warranty does not apply to any defects or other malfunctions caused to the Goods by accident, neglect, vandalism, misuse, alteration, modification or unusual physical, environment or electrical stress.

Please note that the benefits to the purchaser (as a consumer) given by this warranty are in addition to your other rights and remedies under the Australian Consumer Law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

- 11.6 If any goods are not manufactured by the Company, the guarantee of the manufacturer thereof shall be accepted by the Purchaser as the only express warranty given in respect of the goods.
- 11.7 Except as provided in this clause 11, all express and implied warranties, guarantees and conditions under statute or general law as the merchantability, description, quality, suitability or fitness of the Products for any purpose or as to design, assembly, installation, materials or workmanship or otherwise are hereby expressly excluded (to the extent to which they may be excluded by law).

PLEASE SEE SAFETYLINK PTY LTD FULL STANDARD TERMS OF CONDITIONS OF SALE FOR FURTHER REFERENCE.



# EYEBOLT/EYENUT/EYEHOOK ANCHOR

All safety procedures must comply in accordance with the current safety code(s) of practice(s) for working at heights. Ensure safety at all times during and after installation by using an appropriate height safety system.

- ⚠ **Note:** Ensure bolt threads extend at least 3mm from nuts once fully tightened.
- ⚠ If any doubt exists with the strength of the structure an engineer should make the assessment.
- ⚠ Installation must be carried out by, or under the supervision of a competent height safety installer.
- ⚠ During installation you must be safe at all times.

## INSPECT THE INTEGRITY OF THE STRUCTURE

- Installation of anchors can only be made to structures strong enough to support the anchor point.
- Inspect that steel sections are structurally secure and capable of at least 15kN loads.
- Minimum steel gauge 3mm.
- Steel sections must be inspected thoroughly for splits, rust and corrosion damage.
- Ensure the steel structure is secured in accordance with current Building Codes.

## POSITIONING OF ANCHOR POINTS

- The pendulum effect applies (refer to Appendix Diagram 2)
- The first Anchor Point must be in a position easily and safely reached from a safe access point.
- Anchors should not be positioned close to an edge, minimum distance 150mm.

## DRILLING THE HOLE

- Locate the centre of the steel section and drill a 16mm mounting hole for M16 and 12mm hole for M12.

## INSTALLING EYEBOLTS

1. Place the Eyebolt through M16 hole, (**IMPORTANT NOTE: Before applying Loctite 243 use Loctite 7471 primer to activate the surface according to manufacturer's instructions**).
2. Assemble the M16 washer and M16 nut.
3. Ensure the Eyenut is positioned in-line with the fall of the roof.

## INSTALLING EYENUTS

1. When screwing the M16 Eyenut onto the Allthread Rod make sure it is fully screwed up exposing end of thread.
2. Use *Loctite* on the Eyenut and Allthread Rod to ensure that the unit cannot be tampered with (**IMPORTANT NOTE: Before applying Loctite 243 use Loctite 7471 primer to activate the surface according to manufacturer's instructions**).
3. Ensure the Eyenut is positioned in-line with the fall of the roof.

## INSTALLING EYEHOOKS

1. Drill requires size hole (12mm diameter for EyehookM12 and 16mm diameter hole for EyehookM16) onto steel structure.
2. Place the Eyehook onto the structure where drilled the hole.
3. Fix the Eyehook onto structure by using right size bolt (M12 bolt for EyehookM12 and M16 bolt for EyehookM16).
4. Assemble with spring washer, washer and nut and tighten the nut fully.
5. Use *Loctite* on the nut and bolt thread to ensure that the unit cannot be tampered with (**IMPORTANT NOTE: Before applying Loctite 243 use Loctite 7471 primer to activate the surface according to manufacturer's instructions**).
6. Ensure the Eyehook is positioned in-line with the fall of the roof.

**Eyebolts:** Threads need to have a minimum of **six full 360° turns** into the ultimate thread.

**EyenuTs:** Minimum of **three threads** above internal diameter.



Standard - Product Code: EYEBT001



Abseil - Product Code: EYEBT001



Collared - Product Code: EYEBT001



Product Code: EYENUT M16



Product Code: EYEHOOK M16



Product Code: EYEHOOK M12



All safety procedures must comply in accordance with the current safety code(s) of practice(s) for working at heights. Ensure safety at all times during and after installation by using an appropriate height safety system.

The SafetyLink SpacerLink is an energy absorbing anchor point designed for use on steel structures.

### INSPECT THE INTEGRITY OF THE STRUCTURE

- Installation of anchors can only be made to structures strong enough to support the anchor point.
- Inspect that steel sections are structurally secure and capable of at least 15kN loads.
- Minimum steel gauge 3mm.
- Steel sections must be inspected thoroughly for splits, rust and corrosion damage.
- Ensure the steel structure is secured in accordance with current Building Codes.

### POSITIONING OF SPACERLINK ANCHOR POINT

- The pendulum effect applies (refer to Appendix Diagram 2)
- The first SpacerLink Anchor Point must be in a position easily and safely reached from a safe access point.
- SpacerLink should not be positioned close to an edge, minimum distance 150mm.

### DRILLING THE HOLE

- Locate the centre of the steel section and drill a 16mm mounting hole.

### INSTALLATION – WELDED EYENUT


1. Assemble the 70mm washer with foam onto the rod then push the unit through the structure and fit the 70mm washer, M16 Spring Washer and M16 nut.
2. Ensure the Eyenut is positioned in-line with the fall of the roof.

### INSTALLATION – THREADED EYENUT

1. When screwing the M16 Eyenut onto the Allthread Rod make sure it is fully screwed up exposing end of thread.
2. Use *Loctite* on the Eyenut and Allthread Rod to ensure that the unit cannot be tampered with (**IMPORTANT NOTE: Before applying Loctite 243 use Loctite 7471 primer to activate the surface according to manufacturer's instructions**).
3. Assemble the 70mm washer with foam onto the rod then push the unit through the structure and fit the 70mm washer, M16 Spring Washer and M16 nut.
4. Ensure the Eyenut is positioned in-line with the fall of the roof.

**Eyebolts:** Threads need to have a minimum of **six full 360° turns** into the ultimate thread.

**Eyenuts:** Minimum of **three threads** above internal diameter.

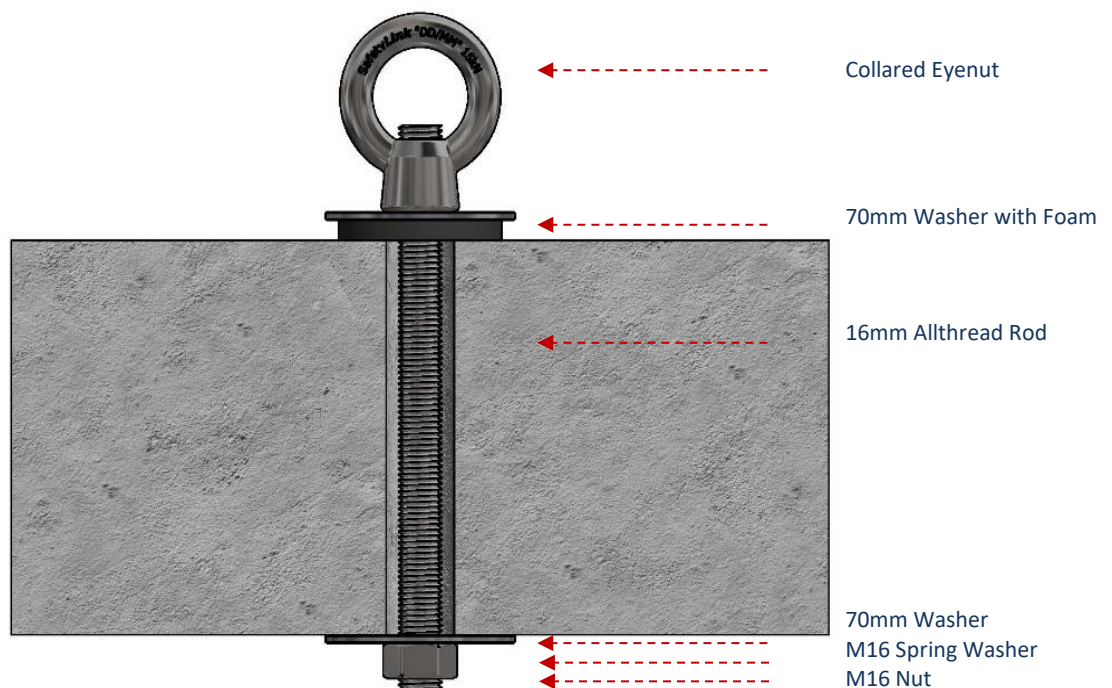

All safety procedures must comply in accordance with the current safety code(s) of practice(s) for working at heights. Ensure safety at all times during and after installation by using an appropriate height safety system.

The SafetyLink SwiveLink is an energy absorbing anchor point designed for use on steel structures.

- ⚠ If any doubt exists with the strength of the structure an engineer should make the assessment.
- ⚠ Installation must be carried out by, or under the supervision of a competent height safety installer.
- ⚠ During installation you must be safe at all times.

## INSPECT THE INTEGRITY OF THE STRUCTURE

- Installation of anchors can only be made to structures strong enough to support the anchor point.
- Inspect that steel sections are structurally secure and capable of at least 15kN loads.
- Minimum steel gauge 3mm.
- Steel sections must be inspected thoroughly for splits, rust and corrosion damage.
- Ensure the steel structure is secured in accordance with current Building Codes.

## STEEL MOUNTED SWIVELINK




1. Locate the centre of the purlin and drill a 28mm hole.
2. Coat SwiveLink thread and nut with Loctite.
3. Tighten Nut.



## APPENDIX – Diagram 2 – Anchor Positioning Layout

### THIS IS A GUIDE ONLY


All working at heights safety procedures must be complied with when installing SafetyLink anchor points. For more information refer to your state or territories current legislation, regulations, policies and codes of practices.

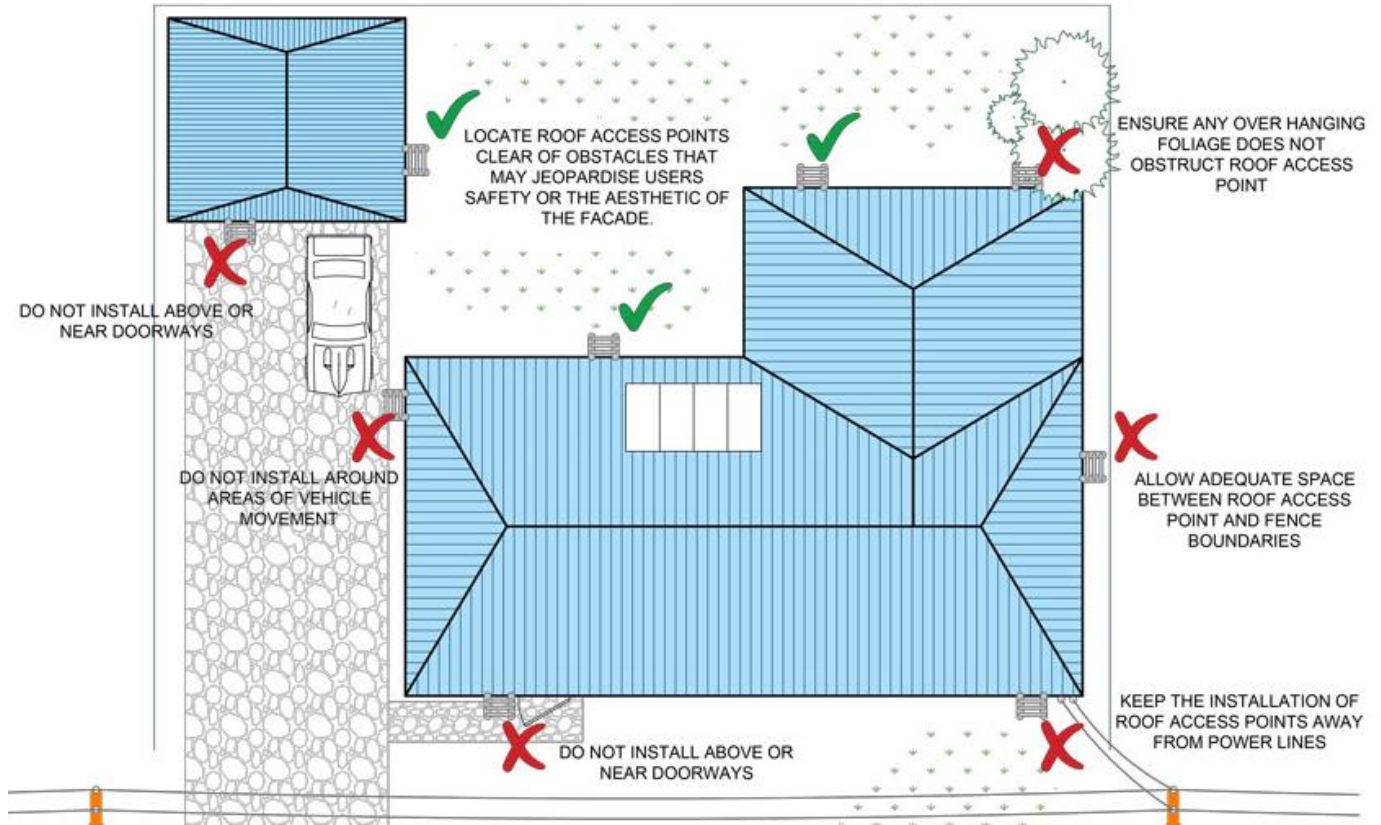

- ⚠ IF ANY DOUBT EXISTS WITH THE STRENGTH OF THE STRUCTURE OR ROOF SHEETS AN ENGINEER SHOULD MAKE THE ASSESSMENT.
- ⚠ DURING INSTALLATION YOU MUST BE SAFE AT ALL TIMES.
- ⚠ INSTALLATION MUST BE CARRIED OUT BY, OR UNDER THE SUPERVISION OF A COMPETENT HEIGHT SAFETY INSTALLER.

### ACCESS, LAYOUT AND USE OF A SAFETYLINK ANCHOR SYSTEM


SafetyLink anchor points are positioned by calculating the pendulum effect, this limits the likelihood of a fall past the edge of the roof space. The pendulum effect still applies to a flat roof.

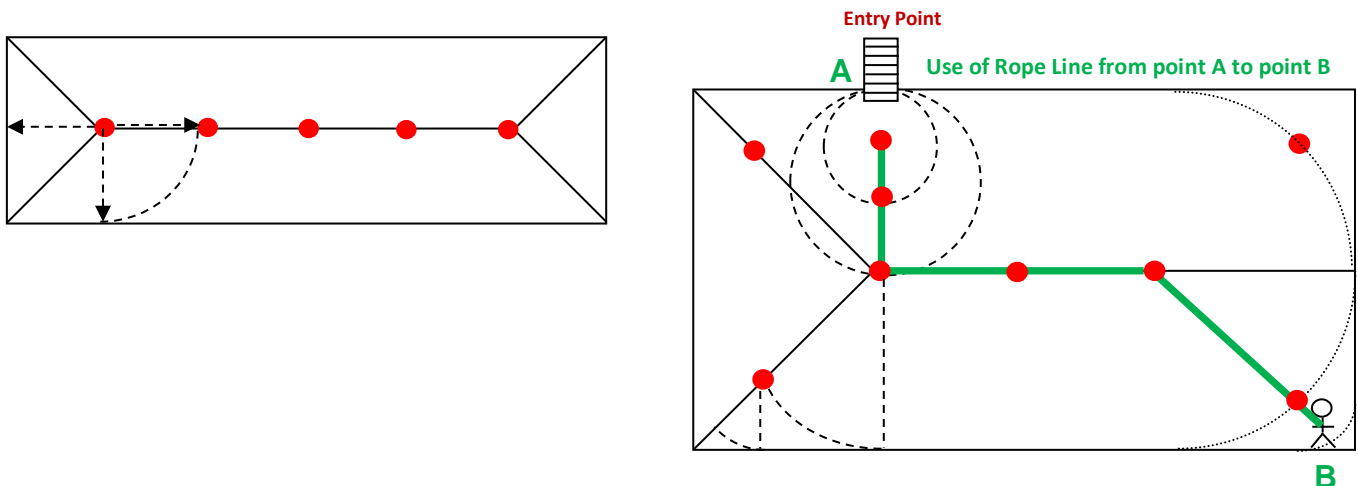

SPACING MUST BE NO GREATER THAN THE RAFTER LENGTH, PLEASE CONTACT YOUR DISTRIBUTOR IF YOU ARE UNSURE.

SAFETYLINK HEIGHT SAFETY SYSTEMS MUST ONLY BE INSTALLED AS PER OUR INSTALLATION GUIDES, TO STRUCTURES AS SPECIFIED IN THE INSTALLATION MANUAL FOR EACH PRODUCT. SHOULD ANY DOUBT EXIST IN REGARD TO THE STRUCTURES INTEGRITY AN ENGINEER SHOULD BE CONSULTED.

# EXPERT FALL PROTECTION PLANNING

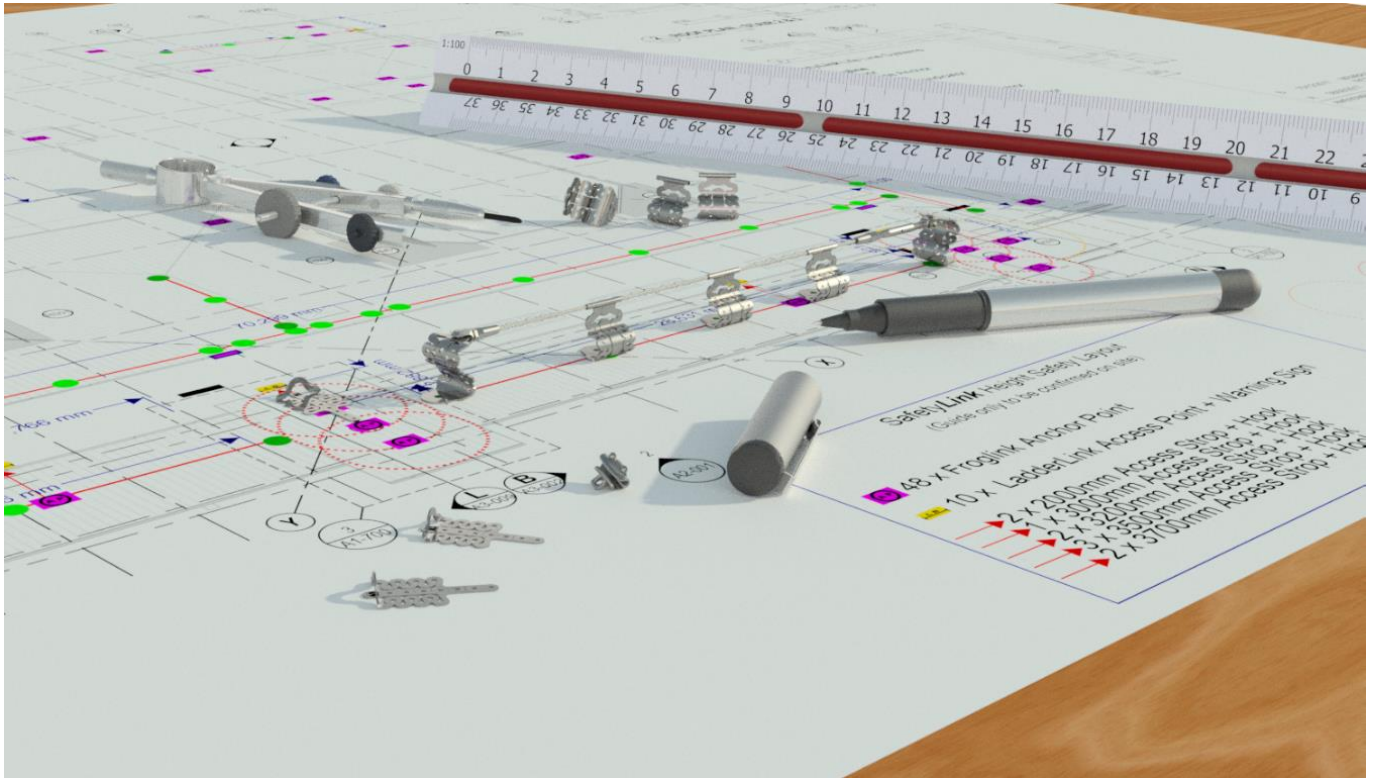

SafetyLink's design and planning team are here to help work out the positioning of your fall protection system, ensuring all areas of your roof are accessed safely.

Things to consider when planning your roof layout:

- Are all areas of your roof protected, allowing complete access when working at heights?
- Are you protected from the ground up, allowing complete access to your roof?
- Detailed comprehensive documentation provided e.g. installation guides, testing results, product sheets should be provided.
- SafetyLink can also provide you with a qualified and reputable installer of SafetyLink products.

Contact our design team at [info@safetylink.com](mailto:info@safetylink.com) and we can plan your fall arrest system for you.

© 2018, SafetyLink Pty Ltd, Australia.

**Patents:** SafetyLink Pty Ltd has a multitude of patents, patents pending, design applications, trademarks and copyrighted documents both lodged and issued. Should you wish to know the progress of our intellectual property on a specific product please email us on [ip@safetylink.com](mailto:ip@safetylink.com) and quote the product code.





SafetyLink®  
*Innovative  
Fall Protection*

# IN CASE OF ACCIDENT

---

- ⚠ **A FALL RESCUE PLAN AND SAFE WORK STATEMENT MUST BE DEVELOPED PRIOR TO USING SAFETYLINK SYSTEMS AND EQUIPMENT.**
- ⚠ **PERSONS WORKING AT HEIGHTS SHOULD NOT WORK ALONE.**

It is critical that before using any SafetyLink Systems a fall rescue plan is in place for any persons suspended mid-air following a fall. Serious injury or death can occur in a matter of minutes, particularly if a person's movement or breathing is restricted or loss of consciousness has occurred. In accordance with your fall rescue plan and appropriate first aid procedures it is essential to remove the person from the suspended position as quickly as possible.

*In accordance with AS/NZS 1891.4:2009 clause 9.5*

## **EQUIPMENT WHICH HAS ARRESTED A FALL OR SHOWS A DEFECT**

Any piece of equipment including both personal and permanently installed items, which has been used to arrest a fall or which shows any defect during operator or periodic inspection shall be withdrawn from service immediately and a replacement obtained if necessary. A label indicating the condition or defect should be attached to the equipment, and it should be examined by a competent height safety installer who will decide whether the equipment is to be destroyed or repaired if necessary and returned to service. In the latter case, details of any repair shall be documented, and a copy given to the operator.



**SafetyLink Pty Ltd | ABN 83 081 777 371 | [www.safetylink.com](http://www.safetylink.com)**

### **DISTRIBUTOR:**

Asia-Pacific/The Americas | +61 2 4964 1068 | [info@safetylink.com](mailto:info@safetylink.com)  
Europe/Africa/Middle East | [europe.sales@safetylink.com](mailto:europe.sales@safetylink.com)  
Northern Europe | [uk.sales@safetylink.com](mailto:uk.sales@safetylink.com)